



Portal > Knowledgebase > General > CLI Reference > Reboot (command)

Reboot (command)

Dmitriy Eshenko - 2021-10-04 - 0 Comments - in CLI Reference

The **reboot** command allows you to properly restart the VyOS instance. Without any modifier, the command is executed immediately.

Syntax

```
vyos@vyos-rtr:~$ reboot
```

You can also use one of the available modifiers to delay the command:

<Enter>	Execute the current command
at	Reboot at a specific time
cancel	Cancel a pending reboot
in	Reboot in X minutes
now	Reboot the system without confirmation

The **reboot now** will not prompt for confirmation.